



		SB <sup>+</sup>	Adv.				P	S	A	M	(G)	▲	⚡	☾	SP										📶 <sup>6</sup>											
		📷 <sup>3</sup>	📷	📷	📷										📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷	📷				
BILDESTAB MODE <sup>3</sup>	📷 <sub>1</sub>	✓ <sup>3</sup>								✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓			
	📷 <sub>2</sub>									✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		
	📷 <sub>3</sub>									✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
	📷 <sub>4</sub>		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
	AV		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
SKJERMOPP- SETT	F.VIS EKS. M. MOD.		✓	✓	✓				✓																									✓		
	FORHÅNDSVIS BILDEEFFEKT	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
	FOKUSSJEKK		✓		✓	✓	✓	✓	✓																											

- 1 Satt til **OFF**.
- 2 Satt til **ON**.
- 3 Endrer seg automatisk avhengig av modus.
- 4 Ikke tilgjengelig i 📷 **HØY-TAST**-, 📷 **LAV-NØKKE**- eller 📷 **DYNAMISK TONE**-modus.
- 5 Kun compatible objektiver.
- 6 Trådløs fjernstyrt fotografering.