

有關相機設定限制的資訊

下表列出了每種拍攝模式下的可用選項。某些選項可能不適用於在特定模式下支援的項目，且根據拍攝條件的不同，功能可能會被限制。

		SR ⁺	Adv.			P	S	A	M	()	▲	✖	⌚	SP															
			Adv.				P	S	A	M	()	▲	✖	⌚									*	TEXT					
防手震模式 ⁵		()	✓ ³								✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
		() ₁		✓			✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
		() ₂									✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
		() ₂		✓	✓		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
		關	✓			✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
畫面設 定	在手動模式預覽曝光										✓																		✓
	預覽相片效果		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
	焦距確認					✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	

1 固定為 OFF。

2 無論選擇了何種選項，感光度均自動調整。

3 根據模式自動改變。

4 在  亮鍵、 低色調 或  動態色調 模式下不可用。

5 僅適用於相容鏡頭。

6 無線遙控拍攝。