

DIGITAL CAMERA

GFX 100RF

New Features Guide

Version 1.10

Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:






 




<https://fujifilm-x.com/support/download/firmware/cameras/>

Contents

The features listed below have been added, deleted, or updated in GFX100RF firmware version 1.10. For the latest manuals, visit the following website.

<https://fujifilm-dsc.com/en/manual/>

❗ A firmware update resets the **CONNECTION MODE** setting in the network/USB setting menu to the default value if **WIRELESS TETHER SHOOTING FIXED** is selected. Configure the settings again according to the external device to be connected.

No.	Description	GFX100RF 	See 	Ver.
1	 WIRELESS COMMUNICATION has been deleted from  SHOOTING SETTING ,  MOVIE SETTING , and  PLAY BACK MENU .	175 194 238	—	1.10
2	instax PRINTER PRINT has been deleted from  PLAY BACK MENU .	242 246 259	—	
3	The pairing procedure between the camera and smartphone has been changed.	250	1	
4	instax PRINTER CONNECTION SETTING has been deleted from the network/USB setting menu.	258 278	—	
5	WIRELESS COMMUNICATION has been deleted from the features that can be assigned in  BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING .	311 341 345 347	—	
6	 WIRELESS COMMUNICATION has been deleted from  BUTTON/DIAL SETTING > Fn1 BUTTON SETTING .	318	—	
7	The “instax SHARE Printers SP-1/SP-2/SP-3” accessories from Fujifilm are no longer supported.	363	—	

Changes and Additions

Changes and additions are as follows.


GFX100RF Owner's Manual: 250


Ver. 1.10

Connecting to a Smartphone


Pair the camera with the smartphone and connect via Bluetooth®.

 - 1 Press **DISP/BACK** while shooting information is displayed.

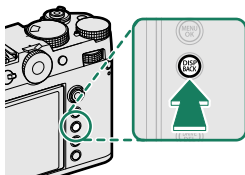


 You can also proceed directly to Step 3 by holding the **DISP/BACK** button during playback.

 - 2 Highlight **Bluetooth** and press **MENU/OK**.

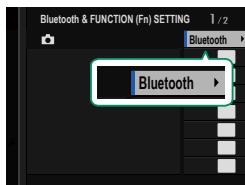


 - 3 Highlight **PAIRING** and press **MENU/OK**.

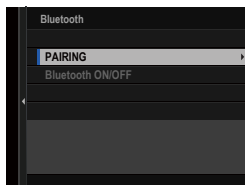

- 4 Launch the app on the smartphone and pair it with the camera to display a code on the smartphone and the camera. Confirm that both codes match to pair.

A smartphone icon and a white Bluetooth icon will appear in the camera display when a connection is established.

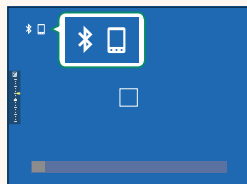 

- Once the devices have been paired, the smartphone will automatically connect to the camera when the app is launched.
- Disabling Bluetooth when the camera is not connected to a smartphone reduces the drain on the battery.

[illegible]

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

<https://fujifilm-x.com>

