

FUJIFILM

DIGITAL CAMERA

GFX 50S

New Features Guide

Version 4.50





Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:













<https://fujifilm-x.com/support/download/firmware/cameras/>



Contents



GFX 50S firmware version 4.50 adds or updates the features listed below. For the latest manuals, visit the following website.

<https://fujifilm-dsc.com/en/manual/>

No.	Description	GFX 50S 	See 	Ver.
1	A  FOCUS BKT item has been added to drive modes.	7, 81	1, 10	3.00
2	The camera now displays the color temperature selected via the color temperature option in the white balance menu.	12, 14	2, 3	4.00
3	The camera now displays an external power supply icon when drawing power from an optional AC-15V AC power adapter.	12, 14	2, 3	4.00
4	If a T/S lens is attached, the shift and rotate amounts are now displayed on the shooting screen and recorded in the EXIF data of new photos.	12, 14, 19, 189	2, 3, 5, 6	4.50
5	An  EYE SENSOR + LCD IMAGE DISP. option has been added to the displays accessible via the VIEW MODE button.	16	4	2.00
6	The focus stick can be used to change focus areas when the display is zoomed in during checking focus.	69	7	4.00
7	The focus stick can be used to change focus areas when the display is zoomed in during MF assist.	73	8	4.00
8	AUTO1 , AUTO2 , and AUTO3 ISO sensitivity options are now available when the sensitivity dial is rotated to C (command).	74	9	4.00
9	The maximum number of pictures that can be stored in a single folder has changed from 9,999 to 999.	82	10	4.00

No.	Description	GFX 50S 	See 	Ver.
10	 CLASSIC Neg. , and  ETERNA/CINEMA options have been added to  IMAGE QUALITY SETTING > FILM SIMULATION in the shooting menu.	88	11	4.00
11	A SMOOTH SKIN EFFECT item has been added to  IMAGE QUALITY SETTING in the shooting menu.	89	12	4.00
12	A LOW LIGHT PRIORITY AF-S item has been added to  AF/MF SETTING in the shooting menu.	98	12	4.00
13	Improved the performance of  AF/MF SETTING > FACE/EYE DETECTION SETTING in the shooting menu.	100	13	4.00
14	A FOCUS BKT item has been added to  SHOOTING SETTING in the shooting menu.	106	15	3.00
15	The  SHOOTING SETTING > FOCUS BKT item in the shooting menu now offers a choice of MANUAL and AUTO focus bracketing options.	106		4.00
16	A FLICKER REDUCTION option has been added to  SHOOTING SETTING in the shooting menu.	109	17	3.10
17	The 35mm FORMAT MODE option in the shooting menu has been moved to the top level of the  SHOOTING SETTING menu. 35mm FORMAT MODE can now be used even without a mount adapter.	111	17	3.30
18	The procedure for rating pictures has changed. As a result, the content of the playback information displays has changed and a RATING item has been added to the playback menu.	120, 121, 136	18, 19, 20	4.00
19	A SIMULTANEOUS DELETE(RAW SLOT1/JPG SLOT2) item has been added to playback menu.	130	20	3.30

No.	Description	GFX 50S 	See 	Ver.
20	The options available for SCREEN SET-UP > EVF BRIGHTNESS > MANUAL in the setup menu now range from +5 to -7 .	153	21	2.00
21	An EVF COLOR ADJUSTMENT option has been added to SCREEN SET-UP in the setup menu.	153	21	3.30
22	An LCD COLOR ADJUSTMENT option has been added to SCREEN SET-UP in the setup menu.	153	21	3.30
23	LARGE INDICATORS MODE(EVF) and LARGE INDICATORS MODE(LCD) options have been added to SCREEN SET-UP in the setup menu.	159	22, 23	3.10
24	A LARGE INDICATORS DISP. SETTING option has been added to SCREEN SET-UP in the setup menu.	159	24	3.10
25	An S.S. OPERATION option has been added to BUTTON/DIAL SETTING in the setup menu.	164	25	2.00
26	A SHOOTWITHOUT CARD option has been added to BUTTON/DIAL SETTING in the setup menu.	165	25	2.00
27	An APERTURE SETTING option has been added to BUTTON/DIAL SETTING in the setup menu.	166	26	4.30
28	A SELECT FOLDER option has been added to SAVE DATA SET-UP in the setup menu.	171	26	3.20
29	ACCESS POINT SETTINGS and IP ADDRESS options have been added to CONNECTION SETTING > WIRELESS SETTINGS in the setup menu.	172	27	1.10
30	The contents of the setup menu CONNECTION SETTING > PC CONNECTION SETTING item have been moved to CONNECTION SETTING > WIRELESS SETTINGS > ACCESS POINT SETTINGS .	173	27	1.10
31	An INFORMATION option has been added to CONNECTION SETTING in the setup menu.	174	27	1.10

No.	Description	GFX 50S 	See 	Ver.
32	A WIRELESS FIXED option has been added to CONNECTION SETTING > PC SHOOT MODE in the setup menu.	174		1.10
33	The CONNECTION SETTING > PC SHOOT MODE option in the setup menu has changed to PC CONNECTION MODE .	174	28	2.00
34	The software that can be used with the CONNECTION SETTING > PC CONNECTION MODE option in the setup menu has changed.	174		4.00
35	The procedure for adjusting aperture has been changed to accommodate lenses not equipped with aperture rings.	189	30, 31	4.30
36	Third-party studio flash commanders compatible with the FUJIFILM flash system can now be used.	198	32	2.00
37	In addition to the instax SHARE printers listed in “Accessories from FUJIFILM”, the camera now supports the SP-3.	220	32	2.00
38	The camera can now be used to update the firmware not only for lenses but also for such optional accessories as shoe-mounted flash units and mount adapters.	232	—	1.10

Changes and Additions


Changes and additions are as follows.









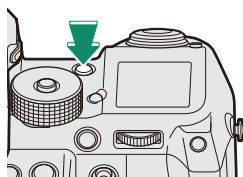



GFX 50S Owner's Manual:  7


Ver. 3.00

The Drive Button


Pressing the drive button displays the following drive mode options.



Mode		Mode	
 STILL IMAGE (single frame)		 WHITE BALANCE BKT (white balance bracketing)	
 CONTINUOUS (burst mode)		 DYNAMIC RANGE BKT (dynamic range bracketing)	
 AE BKT (exposure bracketing)		 FOCUS BKT (focus bracketing)	10
 ISO BKT (sensitivity bracketing)		 MULTIPLE EXPOSURE	
 FILM SIMULATION BKT (film simulation bracketing)		 MOVIE	

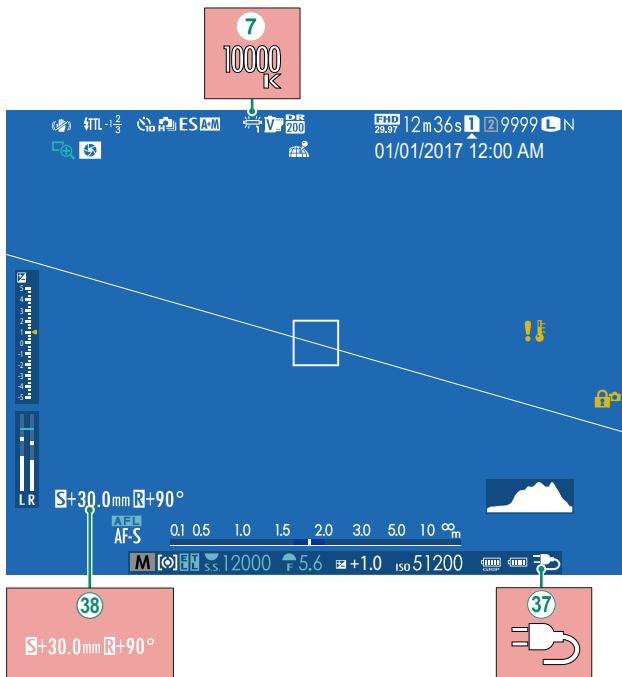

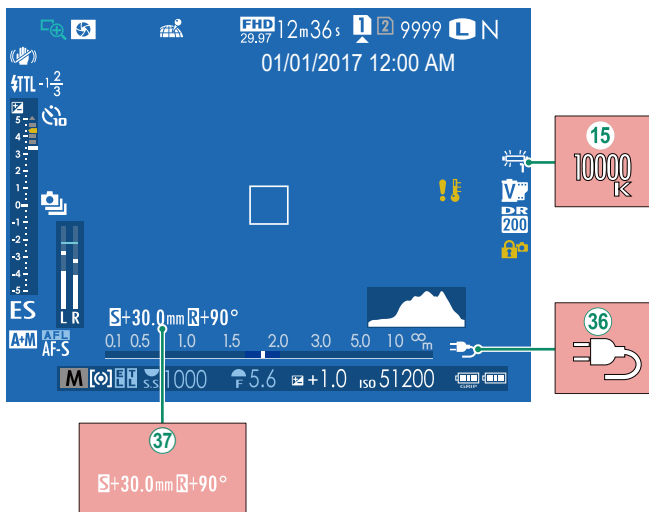


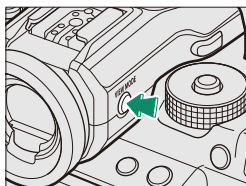
- ⑦ When a color temperature is selected for white balance (GFX 50S Owner's Manual 92), the chosen value now appears in the display.
- ③⑦ The camera now displays an external power supply icon when drawing power from an optional AC-15V AC power adapter.
- ③⑧ If a T/S lens is attached, the shift and rotate amounts are displayed.



- ⑮ When a color temperature is selected for white balance (*GFX 50S Owner's Manual* 92), the chosen value now appears in the display.
- ⑯ The camera now displays an external power supply icon when drawing power from an optional AC-15V AC power adapter.
- ⑰ If a T/S lens is attached, the shift and rotate amounts are displayed.

Press the **VIEW MODE** button to cycle through the following display modes:

-  **EYE SENSOR**: Putting your eye to the viewfinder turns the viewfinder on and the LCD monitor off; taking your eye away turns the viewfinder off and LCD monitor on.
- **EVF ONLY**: Viewfinder on, LCD monitor off.
- **LCD ONLY**: LCD monitor on, viewfinder off.
- **EVF ONLY** + : Putting your eye to the viewfinder turns the viewfinder on; taking it away turns the viewfinder off. The LCD monitor remains off.
-  **EYE SENSOR + LCD IMAGE DISP.**: Putting your eye to the viewfinder during shooting turns the viewfinder on, but the LCD monitor is used for the display of images once you remove your eye from the viewfinder after shooting.



To choose the items shown in the standard indicator display:

1 Display standard indicators.

Press the **DISP/BACK** button until standard indicators are displayed.

2 Select DISP. CUSTOM SETTING.

Select  **SCREEN SET-UP > DISP. CUSTOM SETTING** in the setup menu.

3 Choose items.

Highlight items and press **MENU/OK** to select or deselect.

- FRAMING GUIDELINE
- ELECTRONIC LEVEL
- FOCUS FRAME
- AF DISTANCE INDICATOR
- MF DISTANCE INDICATOR
- HISTOGRAM
- LIVE VIEW HIGHLIGHT ALERT
- SHOOTING MODE
- APERTURE/S-SPEED/ISO
- INFORMATION BACKGROUND
- Expo. Comp. (Digit)
- Expo. Comp. (Scale)
- FOCUS MODE
- PHOTOMETRY
- SHUTTER TYPE
- FLASH
- CONTINUOUS MODE
- DUAL IS MODE
- TOUCH SCREEN MODE
- WHITE BALANCE
- FILM SIMULATION
- DYNAMIC RANGE
- SHIFT AMOUNT OF T/S LENS
- ROTATE AMOUNT OF T/S LENS
- FRAMES REMAINING
- IMAGE SIZE/QUALITY
- MOVIE MODE & REC. TIME
- 35mm FORMAT MODE
- MIC LEVEL
- BATTERY LEVEL
- FRAMING OUTLINE

4 Save changes.


Press **DISP/BACK** to save changes.

5 Exit the menus.

Press **DISP/BACK** as needed to exit the menus and return to the shooting display.

View the shift amount or rotate amount of lenses on the EVF or LCD. The shift and rotate amounts are displayed in increments of 0.5 mm and 3°, respectively.





 The shift amount and rotate amount are also recorded to the EXIF data of images that have been taken.

Focus-Point Selection

Checking Focus

To zoom in on the current focus area for precise focus, press the control to which focus zoom has been assigned (at default settings, the center of the rear command dial). Press the control again to cancel zoom.

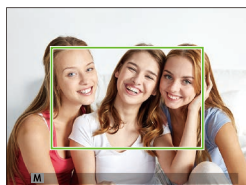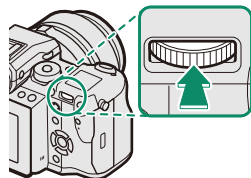

Normal display




Focus zoom





In focus mode **S**, zoom can be adjusted by rotating the rear command dial. Focus area selection using the focus stick is available during focus zoom. Focus zoom is not available in focus mode **C** or when **AF/MF SETTING** > **PRE-AF** is on or an option other than **SINGLE POINT** is selected for **AF MODE**.

To assign focus zoom to a control, select **FOCUS CHECK** for **FUNCTION (Fn) SETTING**.

Focus Zoom


If **ON** is selected for  **AF/MF SETTING** > **FOCUS CHECK**, the camera will automatically zoom in on the selected focus area when the focus ring is rotated.

 If **STANDARD** or **FOCUS PEAK HIGHLIGHT** is selected for  **AF/MF SETTING** > **MF ASSIST**, zoom can be adjusted by rotating the rear command dial. Focus area selection using the focus stick is available during focus zoom.

Sensitivity

Adjust the camera's sensitivity to light.

Press the sensitivity dial lock release, rotate the dial to the desired setting, and press the release again to lock the dial in place.

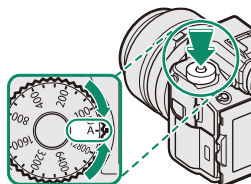



Option	Description
A (auto)	Sensitivity is automatically adjusted in response to shooting conditions according to option chosen for SHOOTING SETTING > ISO AUTO SETTING . Choose from AUTO1 , AUTO2 , and AUTO3 .
C (command)	Rotate the front command dial to choose from AUTO1 , AUTO2 , AUTO3 , and values of from 50 to 102400. Values of 50 or over 25600 are referred to as "extended values".
12800–100	Adjust sensitivity manually. Selected value is shown in display.


Adjusting Sensitivity


High values can be used to reduce blur when lighting is poor, while lower values allow slower shutter speeds or wider apertures in bright light; note, however, that mottling may appear in pictures taken at high sensitivities.

 **FOCUS BKT**

Each time the shutter button is pressed, the camera takes a series of photos, varying focus with each shot. The number of shots, the amount focus changes with each shot, and the interval between shots can be selected using  **SHOOTING SETTING > FOCUS BKT** ( 15).

Continuous Shooting (Burst Mode)

Press the drive button and select  **CONTINUOUS**. The camera will take pictures while the shutter button is pressed; shooting ends when the shutter button is released or the memory card is full.













 If file numbering reaches 999 before shooting is complete, the remaining pictures will be recorded to a new folder.

Burst shooting may not begin if the space available on the memory card is insufficient.

Frame rate varies with the subject, shutter speed, sensitivity, and focus mode. Frame rates may slow and recording times increase as more shots are taken. The flash may or may not fire, depending on shooting conditions.

FILM SIMULATION

Simulate the effects of different kinds of film, including black-and-white (with or without color filters). Choose a palette according to your subject and creative intent.


Option	Description
 PROVIA/STANDARD	Standard color reproduction. Suited to a wide range of subjects, from portraits to landscapes.
 Velvia/VIVID	A high-contrast palette of saturated colors, suited to nature photos.
 ASTIA/SOFT	Enhances the range of hues available for skin tones in portraits while preserving the bright blues of daylight skies. Recommended for outdoor portrait photography.
 CLASSIC CHROME	Soft color and enhanced shadow contrast for a calm look.
 PRO Neg. Hi	Offers slightly more contrast than  PRO Neg. Std. Recommended for outdoor portrait photography.
 PRO Neg. Std	A soft-toned palette. The range of hues available for skin tones is enhanced, making this a good choice for studio portrait photography.
 CLASSIC Neg.	Enhanced color with hard tonality to increase image depth.
 ETERNA/CINEMA	Soft color and rich shadow tone suitable for film look movie.
 ACROS*	Take black-and-white photos with rich gradation and outstanding sharpness.
 MONOCHROME*	Take pictures in standard black and white.
 SEPIA	Take pictures in sepia.









* Available with yellow (**Ye**), red (**R**), and green (**G**) filters, which deepen shades of gray corresponding to hues complementary to the selected color. The yellow (**Ye**) filter deepens purples and blues and the red (**R**) filter blues and greens. The green (**G**) filter deepens reds and browns, including skin tones, making it a good choice for portraits.

SMOOTH SKIN EFFECT

Smooth complexions.

Option	Description
STRONG	Choose for a strong effect.
WEAK	Choose for a weak effect.
OFF	Turn the effect off.

 **SMOOTH SKIN EFFECT** options have also been added to.


-  **IMAGE QUALITY SETTING > EDIT/SAVE CUSTOM SETTING**
(*GFX 50S Owner's Manual*  96)
-  **PLAY BACK MENU > RAW CONVERSION**
(*GFX 50S Owner's Manual*  128)
-  **BUTTON/DIAL SETTING > EDIT/SAVE QUICK MENU**
(*GFX 50S Owner's Manual*  161, 179)
-  **BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING**
(*GFX 50S Owner's Manual*  162, 182)

LOW LIGHT PRIORITY AF-S


Selecting **ON** increases exposure times for low-light AF, allowing faster focus when lighting is poor.

Options	
ON	OFF

Intelligent Face Detection sets focus and exposure for human faces anywhere in the frame, preventing the camera from focusing on the background in group portraits. Choose for shots that emphasize portrait subjects. Faces can be detected with the camera in vertical or horizontal orientation; if a face is detected, it will be indicated by a green border. If there is more than one face in the frame, the camera will select the face closest to the center; other faces are indicated by white borders. You can also choose whether the camera detects and focuses on eyes when Intelligent Face Detection is on. Choose from the following options:

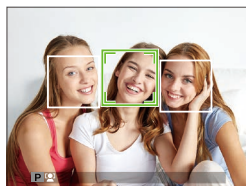

Option	Description
FACE ON/EYE OFF	Intelligent Face Detection only.
FACE ON/EYE AUTO	The camera automatically chooses which eye to focus on when a face is detected.
FACE ON/RIGHT EYE PRIORITY	The camera focuses on the right eye of subjects detected using Intelligent Face Detection.
FACE ON/LEFT EYE PRIORITY	The camera focuses on the left eye of subjects detected using Intelligent Face Detection.
FACE OFF/EYE OFF	Intelligent Face Detection and eye priority off.

 In some modes, the camera may set exposure for the frame as a whole rather than the portrait subject.

If the subject moves as the shutter button is pressed, the face may not be in the area indicated by the green border when the picture is taken.



The face selected by the camera is indicated by a green border.

If there is more than one face in the frame, the camera will select the face closest to the center; other faces are indicated by white borders.

If the selected subject leaves the frame, the camera will wait a set time for its return and consequently the green frame may sometimes appear in locations where no face is seen.

Depending on shooting conditions, face selection may be suspended at the close of burst shooting.

Faces can be detected with the camera in vertical or horizontal orientation.

If the camera is unable to detect the subject's eyes because they are hidden by hair, glasses, or other objects, the camera will instead focus on faces.

Face/eye detection options can also be accessed via shortcuts.

FOCUS BKT


Choose from **AUTO** and **MANUAL** focus bracketing modes.

- **MANUAL**: In **MANUAL** mode, you choose the following.

Option	Description
FRAMES	Choose the number of shots.
STEP	Choose the amount focus changes with each shot.
INTERVAL	Choose the interval between shots.


Focus and FRAMES/STEP

The relation between focus and the options chosen for **FRAMES** and **STEP** is shown in the illustration.

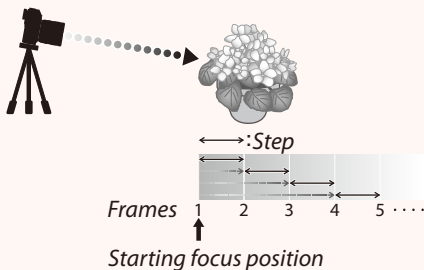



- Focus proceeds from the starting position toward infinity.
- Small **STEP** values translate to small changes in focus, larger values to larger changes.
- Regardless of the option chosen for **FRAMES**, shooting ends when focus reaches infinity.

- **AUTO:** In **AUTO** mode, the camera calculates **FRAMES** and **STEP** automatically.


- 1 Select  **SHOOTING SETTING** in the shooting menu, highlight **FOCUS BKT**, and press **MENU/OK**.
- 2 Select **AUTO** and choose an **INTERVAL**.
The view through the lens will be displayed.

- 3 Focus on the nearest end of the subject and press **MENU/OK**.
The selected focus distance appears as **A** on the focus distance indicator.

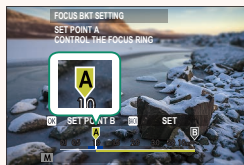

 The same focus range can be chosen by focusing on the farthest end of the subject first.

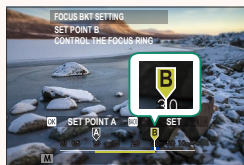

- 4 Focus on the farthest end of the subject and press **DISP/BACK**.
The selected focus distance (**B**) and focus range (**A to B**) appear on the focus distance indicator.



 Instead of pressing the **DISP/BACK** button, you can press **MENU/OK** and select **A** again.

- 5 Take photographs.
The camera will calculate values for **FRAMES** and **STEP** automatically.
The number of frames will appear in the display.




 **FOCUS BKT SETTING** can also be assigned to a function button (*GFX 50S Owner's Manual*  162, 182).


FLICKER REDUCTION


Select **ON** to reduce flicker in pictures and the display when shooting under fluorescent lighting and other similar light sources.

Options	
ON	OFF

 Enabling flicker reduction disables the electronic shutter and increases the time needed to record pictures.



35mm FORMAT MODE

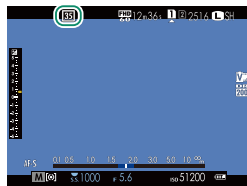
Enabling  **SHOOTING SETTING > 35mm FORMAT MODE** in the shooting menu sets the picture angle to 35 mm; the change is reflected in the display.



Option	Description
ON	The picture angle is set to 35 mm; the change is reflected in the display.
OFF	35 mm format mode disabled.
AUTO	35 mm format mode is enabled automatically when a mount adapter that supports automatic detection is attached.


 The  **SCREEN SET-UP > DISP. CUSTOM SETTING** item in the setup menu (*GFX 50S Owner's Manual*  19, 158) includes an option (enabled by default) for displaying a **35mm FORMAT MODE** icon.

The  **IMAGE QUALITY SETTING > IMAGE SIZE** item in the shooting menu is fixed at  **3:2**.

35mm FORMAT MODE can also be assigned to a function button (*GFX 50S Owner's Manual*  162, 182).



This section lists the indicators that may be displayed during playback.

 For illustrative purposes, displays are shown with all indicators lit.

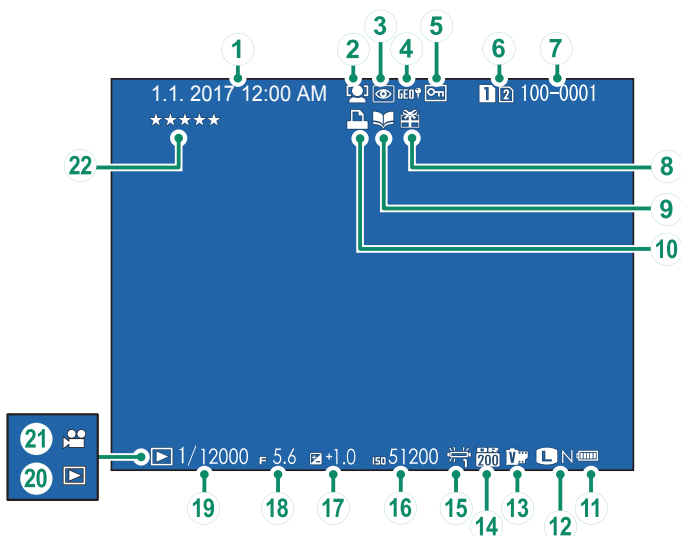

- | | |
|------------------------------|---------------------------|
| ① Date and time | ⑫ Image size/quality |
| ② Face detection indicator | ⑬ Film simulation |
| ③ Red-eye removal indicator | ⑭ Dynamic range |
| ④ Location data | ⑮ White balance |
| ⑤ Protected image | ⑯ Sensitivity |
| ⑥ Card slot | ⑰ Exposure compensation |
| ⑦ Frame number | ⑱ Aperture |
| ⑧ Gift image | ⑲ Shutter speed |
| ⑨ Photobook assist indicator | ⑳ Playback mode indicator |
| ⑩ DPOF print indicator | ㉑ Movie icon |
| ⑪ Battery level | ㉒ Rating..... 20 |

The **DISP/BACK** button controls the display of indicators during playback.

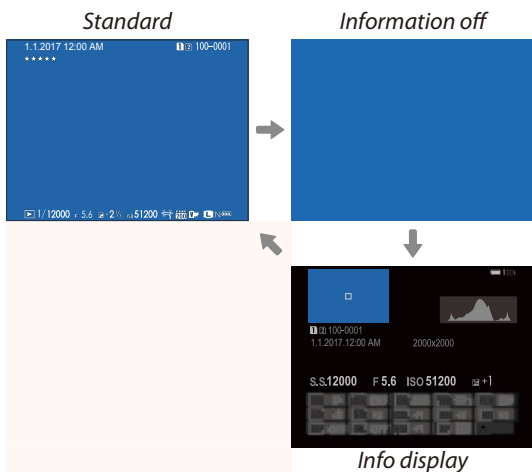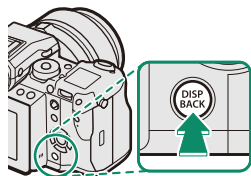


The Info Display

In the info display, you can press the selector up to cycle through a series of information and histogram displays.

Favorites: Rating Pictures

Pictures can be rated via the **RATING** item in the playback menu.

SIMULTANEOUS DELETE(RAW SLOT1/JPG SLOT2)


Taking photos with **RAW/JPEG** selected for  **SAVE DATA SET-UP > CARD SLOT SETTING (STILL IMAGE)** creates two copies. Choose whether deleting the RAW image will also delete the JPEG copy.

Option	Description
ON	Deleting the RAW image from the card in Slot 1 also deletes the JPEG copy from the card in Slot 2.
OFF	Deleting the RAW image from the card in Slot 1 does not delete the JPEG copy from the card in Slot 2.

RATING

Rate pictures using stars.

- 1 Select **RATING** in the playback menu.
- 2 Rotate the front command dial to choose a picture and the rear command dial to choose a rating of from 0 to 5 stars ("★").

 The selector can be used in place of the front command dial to choose a picture.

The rating dialog can also be displayed by pressing the **Fn5** button in single-frame, nine-frame, or hundred-frame playback.

Use touch controls to zoom in or out.

EVF BRIGHTNESS


Adjust the brightness of the display in the electronic viewfinder. Select **MANUAL** to choose from 13 options from +5 (bright) to -7 (dark), or select **AUTO** for automatic brightness adjustment.

Options	
MANUAL	AUTO

EVF COLOR ADJUSTMENT

Adjust the color of the display in the electronic viewfinder.

- Adjust colors using the selector.

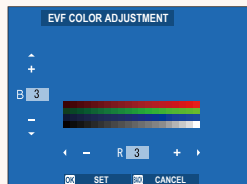


- Press **MENU/OK**.

LCD COLOR ADJUSTMENT

Adjust the color of the display in the LCD monitor.

- Adjust colors using the selector.
- Press **MENU/OK**.

Select **ON** to display large indicators in the electronic viewfinder. The indicators displayed can be selected using **SCREEN SET-UP > LARGE INDICATORS DISP. SETTING**.

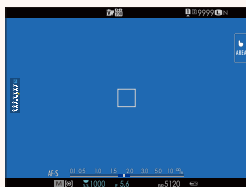

OFF



ON

Some icons are not displayed when **ON** is selected for **LARGE INDICATORS MODE(EVF)**, including:


- Focus indicator
- Focus mode
- Distance indicator
- Recording level
- IS mode

If **LARGE INDICATORS MODE** is assigned to a function button, the button can be used to toggle **LARGE INDICATORS MODE** on (**ON**) and off (**OFF**) (*GFX 50S Owner's Manual* 162, 182).

Select **ON** to display large indicators in the LCD monitor. The indicators displayed can be selected using **SCREEN SET-UP > LARGE INDICATORS DISP. SETTING**.



OFF

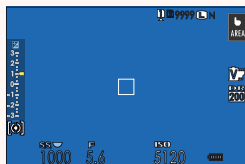


ON

Some icons are not displayed when **ON** is selected for **LARGE INDICATORS MODE(LCD)**, including:

- Focus indicator
- Focus mode
- Distance indicator
- Recording level
- IS mode

If **LARGE INDICATORS MODE** is assigned to a function button, the button can be used to toggle **LARGE INDICATORS MODE** on (**ON**) and off (**OFF**) (*GFX 50S Owner's Manual* 162, 182).

Choose the indicators displayed when **ON** is selected for **SCREEN SET-UP > LARGE INDICATORS MODE(EVF)** or **LARGE INDICATORS MODE(LCD)**.

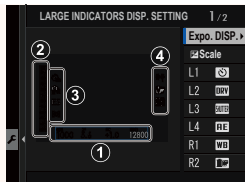

Option	Description
① Expo. DISP.	Choose the items listed at the bottom of the display. Selected items are indicated by check marks (☑); to deselect, highlight the check marks and press MENU/OK .
② Scale	Select ON to display the exposure indicator.
③ L1, L2, L3, L4	Choose up to four large icons for display on the left side of the screen.
④ R1, R2, R3, R4	Choose up to four large icons for display on the right side of the screen.

 S.S. OPERATION

Select **OFF** to disable shutter-speed fine-tuning using the command dials.

Options	
ON	OFF


SHOOT WITHOUT CARD

Choose whether the shutter can be released without a memory card inserted in the camera.

Option	Description
ON	When no memory card is inserted, the shutter can be released to test camera function and the shooting and setup menus can be displayed.
OFF	The shutter is disabled if no memory card is inserted, preventing accidental loss of pictures taken without a memory card.

APERTURE SETTING

Choose the method used to adjust aperture when using lenses with no aperture rings.

Option	Description
AUTO +  MANUAL	Rotate the front command dial to choose the aperture. Rotate past minimum aperture to choose A (auto).
AUTO	Aperture is selected automatically; camera functions in exposure mode P (program AE) or S (shutter-priority AE).
MANUAL	Rotate the front command dial to choose the aperture; camera functions in exposure mode A (aperture-priority AE) or M (manual).



This option can be assigned to a function button.


SELECT FOLDER

Create folders and choose the folder used to store subsequent pictures.

Option	Description
SELECT FOLDER	To choose the folder in which subsequent pictures will be stored, press the selector up or down to highlight an existing folder and press MENU/OK .
CREATE FOLDER	Enter a five-character folder name to create a new folder in which to store subsequent pictures.

WIRELESS SETTINGS

Adjust settings for connection to wireless networks.


Option	Description
GENERAL SETTINGS	Choose a name (NAME) to identify the camera on the wireless network (the camera is assigned a unique name by default) or select RESET WIRELESS SETTINGS to restore default settings.
RESIZE IMAGE FOR SMARTPHONE 	Choose ON (the default setting, recommended in most circumstances) to resize larger images to 3M for upload to smartphones, OFF to upload images at their original size. Resizing applies only to the copy uploaded to the smartphone; the original is not affected.
ACCESS POINT SETTINGS	<ul style="list-style-type: none"> • SIMPLE SETUP: Connect to an access point using simple settings. • MANUAL SETUP: Manually adjust settings for connection to a wireless network. Choose the network from a list (SELECT FROM NETWORK LIST) or enter the name manually (ENTER SSID).
IP ADDRESS	<ul style="list-style-type: none"> • AUTO: The IP address is assigned automatically. • MANUAL: Assign an IP address manually. Manually choose the IP address (IP ADDRESS), network mask (NETMASK), and gateway address (GATEWAY ADDRESS).

INFORMATION

View the camera's MAC address.

PC CONNECTION MODE

Adjust settings for connection to a computer.

Option	Description
USB CARD READER	Connecting the camera to a computer via USB automatically enables data transfer mode, allowing data to be copied to the computer. The camera functions normally when not connected.
USB TETHER SHOOTING AUTO	The camera can be controlled from a computer connected via USB. Photographs can be taken remotely and automatically downloaded to computers running Capture One, Adobe® Photoshop® Lightroom® + Tether Plugin, or FUJIFILM X Acquire. FUJIFILM X Acquire can also be used to save and load camera settings. The camera functions normally when not connected.
USB TETHER SHOOTING FIXED	As for USB TETHER SHOOTING AUTO , except that the camera remains in “tethered shooting” mode when the computer is not connected, allowing the computer to resume control when the connection is re-established after an accidental disconnection or other disruption. Note that at default settings, pictures are not recorded to the memory card.
WIRELESS TETHER SHOOTING FIXED	Choose this option for wireless remote photography. Select a network using  CONNECTION SETTING > WIRELESS SETTINGS .
USB RAW CONV./BACKUP RESTORE	<p>Connecting the camera to a computer via USB automatically enables USB RAW conversion/backup restore mode. The camera functions normally when not connected.</p> <ul style="list-style-type: none"> • USB RAW CONV. (requires FUJIFILM X RAW STUDIO): Use the camera's image processing engine to rapidly convert RAW files to high-quality JPEG images. • BACKUP RESTORE (requires FUJIFILM X Acquire): Save and load camera settings. Reconfigure the camera in an instant or share settings with other cameras of the same type.



⚠ POWER MANAGEMENT > AUTO POWER OFF settings also apply during tethered shooting. To prevent the camera turning off automatically, select **OFF** for **AUTO POWER OFF**.



Visit the websites below to learn more about or download the following computer software:

- **Capture One Express Fujifilm:**

<https://www.captureone.com/products-plans/capture-one-express/fujifilm>

- **Capture One Pro Fujifilm:**

<https://www.captureone.com/explore-features/fujifilm>

- **Adobe® Photoshop® Lightroom® + Tether Plugin:**

<https://fujifilm-x.com/global/products/software/adobe-photoshop-lightroom-tether-plugin/>

- **FUJIFILM X Acquire:**

<https://fujifilm-x.com/products/software/x-acquire/>

- **FUJIFILM X RAW STUDIO:**


<https://fujifilm-x.com/products/software/x-raw-studio/>




- **RAW FILE CONVERTER EX powered by SILKYPix:**

<https://fujifilm-x.com/support/download/software/raw-file-converter-ex-powered-by-silkypix/>

Aperture ring

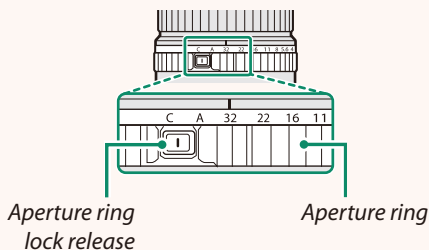Rotate the lens aperture ring to choose the aperture (f-number).




Setting	Description
C ()	Set aperture to the value chosen with the camera command dial.
A ()	Set aperture to the value chosen automatically by the camera.
Other values ()	Set aperture to the selected value.



To select **C** or **A**, or to select another value after selecting **C** or **A**, press the aperture ring lock release while rotating the aperture ring.

Lenses with No Aperture Rings

The method used to adjust aperture can be selected using **FUNCTION/SETTING** > **APERTURE SETTING**. When an option other than **AUTO** is selected, aperture can be adjusted using the front command dial.

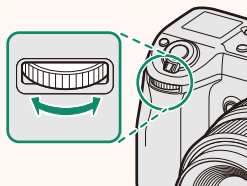

- Aperture control defaults to the front command dial, but can be reassigned to the rear command dial using **FUNCTION/SETTING** > **COMMAND DIAL SETTING**.

Flash Settings

Third-party studio flash commanders compatible with the FUJIFILM flash system can now be used. For more information, see the documentation provided your studio flash unit.

Accessories from FUJIFILM**instax SHARE printers**

SP-1/SP-2/SP-3: Connect via wireless LAN to print pictures on instax film.

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

<https://fujifilm-x.com>

