

FUJIFILM

DIGITAL CAMERA

X-T30

New Features Guide

Version 2.00







Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:













<https://fujifilm-x.com/support/download/firmware/>

Contents

X-T30 firmware version 2.00 adds or updates the features listed below. For the latest manuals, visit the following website.

<http://fujifilm-dsc.com/en/manual/>

No.	Description	X-T30 	See 	Ver.
1	The procedure for rating pictures has changed. As a result, the content of the playback information displays has changed and a RATING item has been added to the playback menu.	162, 163, 177	1, 2, 3	1.40
2	An  AREA SETTING option has been added under  USER SETTING in the setup menu, resulting in a change to the basic setup procedure and adjustments to TIME DIFFERENCE . In addition, DATE/TIME now offers a 24-hour clock.	187	4	2.00
3	The items listed in the setup menu under  USER SETTING > RESET have changed.	189	5	2.00
4	The Q (quick menu) button can now be used as an Fn (function) button.	204, 225, 228, 230	9, 10, 12	1.10
5	The  CONNECTION SETTING > Bluetooth SETTINGS item in the setup menu has been renamed Bluetooth/SMARTPHONE SETTING and now offers an IMAGE TRANSFER WHILE POWER OFF option. In addition, AUTO IMAGE TRANSFER and SMARTPHONE SYNC. SETTING have respectively been renamed AUTO IMAGE TRANSFER ORDER and SMARTPHONE LOCATION SYNC .	216	7	2.00
6	Upload timing has changed. Pictures can now be uploaded not only during playback or when the camera is off but also while shooting is in progress.	216	7	2.00

No.	Description	X-T30 	See 	Ver.
7	<p> CONNECTION SETTING > GENERAL SETTINGS has been reorganized as follows:</p> <ul style="list-style-type: none"> • LOCATION INFO has been moved to  SCREEN SET-UP, •  BUTTON SETTING has been moved to  BUTTON/DIAL SETTING and renamed  Fn1 BUTTON SETTING, • GEOTAGGING has been moved to  SAVE DATA SET-UP, and • NAME and RESIZE IMAGE FOR SMARTPHONE  have been moved to Bluetooth/SMARTPHONE SETTING. 	201, 210, 215, 216	6, 7	2.00
8	The procedure for connecting wirelessly to smartphones has changed.	252	15	2.00
9	A Bluetooth DEVICE LIST item has been added to  CONNECTION SETTING > Bluetooth SETTINGS in the setup menu.	216	7	1.50
10	Movie recording can now be controlled from external devices, and the  CONNECTION SETTING > PC CONNECTION MODE item in the setup menu has consequently been renamed CONNECTION MODE .	218	13	1.20
11	The camera can now be used as a webcam. An X WEBCAM option has consequently been added to the  CONNECTION SETTING > CONNECTION MODE item in the setup menu.	218	13	1.40
12	The TG-BT1 tripod grip has been added to the optional accessory list.	262	19	1.50

Changes and Additions

Changes and additions are as follows.


X-T30 Owner's Manual:  162

Ver. 1.40

The Playback Display

This section lists the indicators that may be displayed during playback.



 For illustrative purposes, displays are shown with all indicators lit.

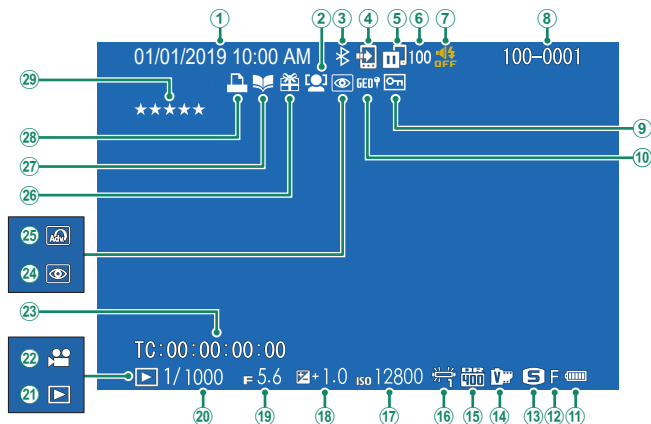

- | | |
|--|------------------------------|
| ① Date and time | ⑬ Image size |
| ② Face detection indicator | ⑭ Film simulation |
| ③ Bluetooth ON/OFF | ⑮ Dynamic range |
| ④ Image transfer order | ⑯ White balance |
| ⑤ Image transfer status | ⑰ Sensitivity |
| ⑥ Number of frames selected for upload | ⑱ Exposure compensation |
| ⑦ Sound and flash indicator | ⑲ Aperture |
| ⑧ Frame number | ⑳ Shutter speed |
| ⑨ Protected image | ㉑ Playback mode indicator |
| ⑩ Location data | ㉒ Movie icon |
| ⑪ Battery level | ㉓ Time code |
| ⑫ Image quality | ㉔ Red-eye removal indicator |
| ⑬ Image size | ㉕ Advanced filter |
| ⑭ Film simulation | ㉖ Gift image |
| ⑮ Dynamic range | ㉗ Photobook assist indicator |
| ⑯ White balance | ㉘ DPOF print indicator |
| ⑰ Sensitivity | ㉙ Rating.....3 |
| ⑱ Exposure compensation | |
| ⑲ Aperture | |
| ⑳ Shutter speed | |
| ㉑ Playback mode indicator | |
| ㉒ Movie icon | |
| ㉓ Time code | |
| ㉔ Red-eye removal indicator | |
| ㉕ Advanced filter | |
| ㉖ Gift image | |
| ㉗ Photobook assist indicator | |
| ㉘ DPOF print indicator | |
| ㉙ Rating.....3 | |

The DISP/BACK Button

The **DISP/BACK** button controls the display of indicators during playback.

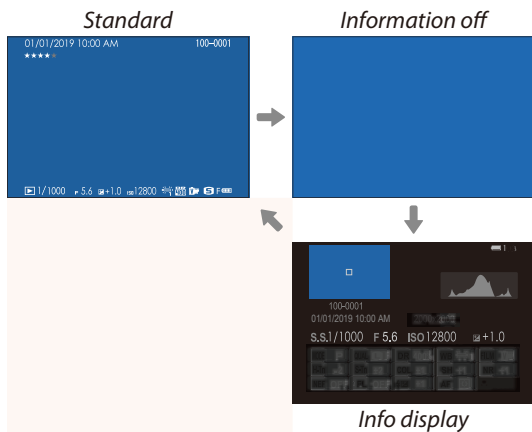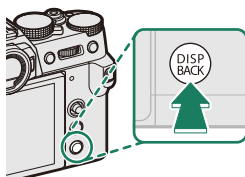

Favorites: Rating Pictures

Pictures can be rated via the **RATING** item in the playback menu.

RATING

Rate pictures using stars.

- 1 Select **RATING** in the playback menu.
- 2 Rotate the front command dial to choose a picture and the rear command dial to choose a rating of from 0 to 5 stars ("★").



- The focus stick (focus lever) can be used in place of the front command dial to choose a picture.
- The rating dialog can also be displayed by pressing the **AE-L** button in single-frame, nine-frame, or hundred-frame playback.
- Use touch controls to zoom in or out.
- The following cannot be rated:
 - Protected pictures
 - Movies
 - "Gift" pictures (pictures taken with other cameras)

 **AREA SETTING**

Adjust settings for your current time zone.

AREA SETTING

Choose your time zone from a map.

DAYLIGHT SAVINGS


Turn daylight saving time on or off.


Option	Description
ON	Daylight saving time on.
OFF	Daylight saving time off.

TIME DIFFERENCE

Switch the camera clock instantly from your home time zone to the local time at your destination when traveling. To specify the difference between your local and home time zone:


 Use  **AREA SETTING** to choose your home time zone before selecting a local time zone using  **LOCAL**.

- 1 Highlight  **LOCAL** and press **MENU/OK**.
- 2 Use the focus stick (focus lever) to choose the local time zone. Press **MENU/OK** when settings are complete.

 Select **ON** to enable daylight saving time.

To set the camera clock to local time, highlight **← LOCAL** and press **MENU/OK**. To set the clock to the time in your home time zone, select **🏠 HOME**.

Options	
← LOCAL	🏠 HOME

 If **← LOCAL** is selected, **←** will be displayed in yellow for about three seconds when the camera is turned on.

X-T30 Owner's Manual: 189

Ver. 2.00

RESET

Reset shooting or setup menu options to default values.

- 1 Highlight the desired option and press **MENU/OK**.

Option	Description
SHOOTING MENU RESET	Reset all shooting menu settings other than custom white balance and custom settings banks created using EDIT/SAVE CUSTOM SETTING to default values.
SET-UP RESET	Reset all setup menu settings other than DATE/TIME , 🏠 AREA SETTING , TIME DIFFERENCE , and COPYRIGHT INFO to default values.
INITIALIZE	Reset all settings other than custom white balance to default values.

- 2 A confirmation dialog will be displayed; highlight **OK** and press **MENU/OK**.




LOCATION INFO

Select **ON** to display location info downloaded from a smartphone.

Options	
ON	OFF

▶ Fn1 BUTTON SETTING

Choose the role performed by the **Fn1** button during playback.

Option	Description
 SMARTPHONE TRANSFER ORDER	Pressing the button marks the current picture for transfer. If the camera is not currently paired with a smartphone, Bluetooth/SMARTPHONE SETTING options will be displayed.
 SELECT & SMARTPHONE TRANSFER ORDER	Pressing the button displays a dialog where pictures can be selected for upload to a smartphone with which the camera is paired. If the camera is not currently paired with a smartphone, Bluetooth/SMARTPHONE SETTING options will be displayed instead.
 WIRELESS COMMUNICATION	The button can be used for wireless connections.

GEOTAGGING

If **ON** is selected, location data downloaded from a smartphone will be embedded in pictures as they are taken.

Options	
ON	OFF

Bluetooth/SMARTPHONE SETTING

Adjust Bluetooth settings.

Option	Description
PAIRING REGISTRATION	Pair the camera with a smartphone or tablet to which the smartphone app has been installed.
SELECT PAIRING DESTINATION	Choose a connection from a list of devices with which the camera has been paired using PAIRING REGISTRATION . Select NO CONNECTION to exit without connecting.
DELETE PAIRING REG.	Delete pairing information for selected devices. Choose the device in the device list. The selected device will also be removed from the devices listed in SELECT PAIRING DESTINATION .
Bluetooth DEVICE LIST	List the devices with which the camera is paired (other than the smartphone) or end pairing with selected devices.
Bluetooth ON/OFF	<ul style="list-style-type: none"> • ON: The camera automatically establishes a Bluetooth connection with paired devices when turned on. • OFF: The camera does not connect via Bluetooth.
AUTO IMAGE TRANSFER ORDER	Choose whether pictures are automatically marked for upload as they are taken.
SMARTPHONE LOCATION SYNC.	Choose whether to synchronize the camera to the location provided by a paired smartphone.
NAME	Choose a name (NAME) to identify the camera on the wireless network (the camera is assigned a unique name by default).
IMAGE TRANSFER WHILE POWER OFF	Choose whether the camera uploads pictures to paired smartphones while off.
RESIZE IMAGE FOR SMARTPHONE 3M	Choose whether to resize images for upload to smartphones. Resizing applies only to the copy uploaded to the smartphone; the original is not affected. <ul style="list-style-type: none"> • ON: Larger images are resized to 3M for upload. • OFF: Images are uploaded at their original size.



- Be sure your smartphone is running the latest version of the applicable smartphone app. Different operating systems use different apps; for more information, visit:
<https://app.fujifilm-dsc.com/>
- Pictures will be uploaded during shooting and playback and while the camera is off if **ON** is selected for both **Bluetooth ON/OFF** and **AUTO IMAGE TRANSFER ORDER** or if images are currently selected for upload using the **IMAGE TRANSFER ORDER** option in the playback menu.
- The camera clock will automatically be set to the time reported by paired smartphones whenever the app is launched.


The Q (Quick Menu) Button

Press **Q** for quick access to selected options.

- Use **FUNCTION (Fn) SETTING > BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING** to choose the function performed by the **Q** (quick menu) button or assign its default function to other controls.
- To disable the **Q** (quick menu) button, select **NONE** for **FUNCTION (Fn) SETTING > BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING > Q BUTTON SETTING**.

The Quick Menu Display

At default settings, the quick menu contains the following items:

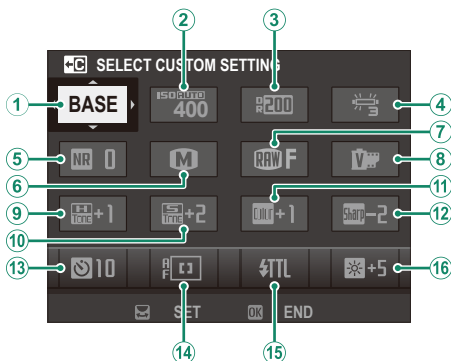


- | | |
|-------------------------|--------------------------|
| ① SELECT CUSTOM SETTING | ⑨ HIGHLIGHT TONE |
| ② ISO | ⑩ SHADOW TONE |
| ③ DYNAMIC RANGE | ⑪ COLOR |
| ④ WHITE BALANCE | ⑫ SHARPNESS |
| ⑤ NOISE REDUCTION | ⑬ SELF-TIMER |
| ⑥ IMAGE SIZE | ⑭ AF MODE |
| ⑦ IMAGE QUALITY | ⑮ FLASH FUNCTION SETTING |
| ⑧ FILM SIMULATION | ⑯ EVF/LCD BRIGHTNESS |

The Fn (Function) Buttons


Assign a role to the function buttons for quick access to the selected feature.

-  The functions assigned to **T-Fn1** through **T-Fn4** can be accessed by flicking the monitor.
- Touch-function gestures are disabled by default. To enable touch-function gestures, select **ON** for  **BUTTON/DIAL SETTING** > **TOUCH SCREEN SETTING** >  **TOUCH FUNCTION**.

The default assignments are:

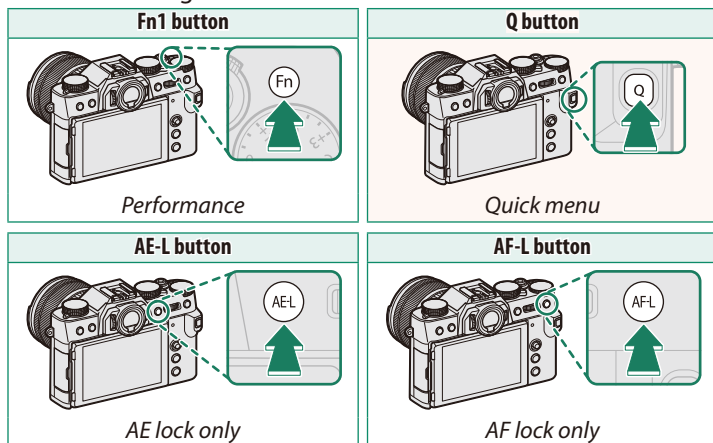


T-Fn1 (flick up)

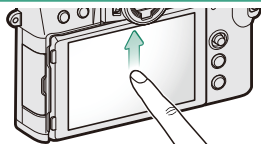


Drive setting

T-Fn2 (flick left)

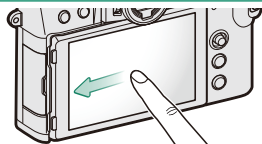


Film simulation

T-Fn3 (flick right)

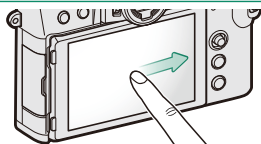


White balance

T-Fn4 (flick down)

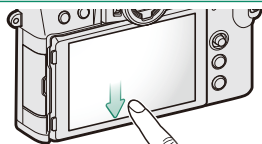

AF mode

Center of rear command dial

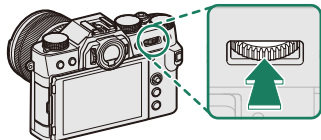

Focus check

FUNCTION (Fn) SETTING**Assigning Roles to the Function Buttons**


3 Highlight the desired role and press **MENU/OK** to assign it to the selected control. Choose from:

- IMAGE SIZE
- IMAGE QUALITY
- RAW
- FILM SIMULATION
- GRAIN EFFECT
- COLOR CHROME EFFECT
- DYNAMIC RANGE
- D RANGE PRIORITY
- WHITE BALANCE
- SELECT CUSTOM SETTING
- FOCUS AREA
- FOCUS CHECK
- AF MODE
- AF-C CUSTOM SETTINGS
-  FACE SELECT 
- FACE DETECTION ON/OFF
- DRIVE SETTING
- SPORTS FINDER MODE
- PRE-SHOT **ES** 
- SELF-TIMER
- PHOTOMETRY
- SHUTTER TYPE
- FLICKER REDUCTION
- ISO
- IS MODE
- WIRELESS COMMUNICATION
- FLASH FUNCTION SETTING
- TTL-LOCK
- MODELING FLASH
- FULL HD HIGH SPEED REC
- ZEBRA SETTING
- INTERNAL/EXTERNAL MIC LEVEL ADJUSTMENT
- MOVIE SILENT CONTROL
- PREVIEW DEPTH OF FIELD
- PREVIEW EXP/WB IN MANUAL MODE
- NATURAL LIVE VIEW
- HISTOGRAM
- ELECTRONIC LEVEL
- LARGE INDICATORS MODE
- AE LOCK ONLY
- AF LOCK ONLY
- AE/AF LOCK
- AF-ON
- AWB LOCK ONLY
- APERTURE SETTING
- PERFORMANCE
- AUTO IMAGE TRANSFER
- SELECT PAIRING DESTINATION
- Bluetooth ON/OFF
- PLAYBACK
- QUICK MENU
- NONE (control disabled)

CONNECTION MODE

Adjust settings for connection to external devices.

Option	Description
USB CARD READER	Connecting the camera to a computer via USB automatically enables data transfer mode, allowing data to be copied to the computer. The camera functions normally when not connected.
X WEBCAM	The camera can be used as a webcam when connected to a computer running FUJIFILM X Webcam.
USB MOVIE SHOOTING AUTO*	The camera's movie-recording features can be controlled from gimbals, drones, or other devices connected via USB. The camera automatically enters "tethered shooting" (i.e., remote-control) mode when the external device is turned on and returns to normal operation when the external device is turned off or disconnected. The features available vary with the type of device connected.
USB MOVIE SHOOTING FIXED*	As for USB MOVIE SHOOTING AUTO , except that the camera remains in "tethered shooting" (remote-control) mode when the external device is off or not connected, allowing the device to resume control when the connection is re-established after an accidental disconnection or other disruption.
USB RAW CONV./BACKUP RESTORE	Connecting the camera to a computer via USB automatically enables USB RAW conversion/backup restore mode. The camera functions normally when not connected. <ul style="list-style-type: none"> • USB RAW CONV. (requires FUJIFILM X RAW STUDIO): Use the camera's image processing engine to rapidly convert RAW files to high-quality JPEG images. • BACKUP RESTORE (requires FUJIFILM X Acquire): Save and load camera settings. Reconfigure the camera in an instant or share settings with other cameras of the same type.

* Rotate the drive dial to  (movie).



POWER MANAGEMENT > AUTO POWER OFF settings also apply when the camera is connected to an external device. To prevent the camera turning off automatically, select **OFF** for **AUTO POWER OFF**.



Visit the websites below to learn more about or download the following computer software:

- **Capture One Express Fujifilm:**
<https://www.captureone.com/products-plans/capture-one-express/fujifilm>
- **Capture One Pro Fujifilm:**
<https://www.captureone.com/explore-features/fujifilm>
- **FUJIFILM X Acquire:**
<https://fujifilm-x.com/products/software/x-acquire/>
- **FUJIFILM X RAW STUDIO:**
<https://fujifilm-x.com/products/software/x-raw-studio/>
- **RAW FILE CONVERTER EX powered by SILKYPIX:**
<https://fujifilm-x.com/support/download/software/raw-file-converter-ex-powered-by-silkypix/>
- **FUJIFILM X Webcam:**
<https://fujifilm-x.com/products/software/x-webcam/>

Connecting to Smartphones

Access wireless networks and connect to computers, smartphones, or tablets. For more information, visit:

<http://fujifilm-dsc.com/wifi/>


Smartphones and Tablets

Installing Smartphone Apps

Before establishing a connection between the smartphone and camera, you will need to install at least one dedicated smartphone app. Visit the following website and install the desired apps on your phone.

<https://app.fujifilm-dsc.com/>





 The apps available vary with the smartphone operating system.

Connecting to a Smartphone


Pair the camera with the smartphone and connect via Bluetooth®.

- 1 Press **DISP/BACK** while shooting information is displayed.

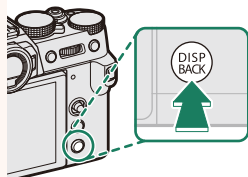


 You can also proceed directly to Step 3 by holding the **DISP/BACK** button during playback.

2 Highlight **Bluetooth** and press **MENU/OK**.

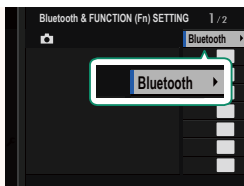

3 Highlight **PAIRING** and press **MENU/OK**.

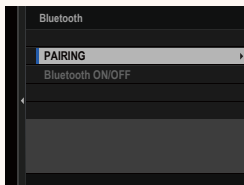


4 Launch the app on the smartphone and pair the smartphone with the camera.

More information is available at the following website:

<https://app.fujifilm-dsc.com/>


When pairing is complete, the camera and smartphone will automatically connect via Bluetooth. A smartphone icon and a white Bluetooth icon will appear in the camera display when a connection is established.

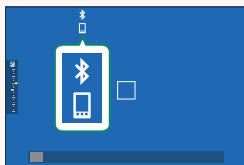

- Once the devices have been paired, the smartphone will automatically connect to the camera when the app is launched.
- Disabling Bluetooth when the camera is not connected to a smartphone reduces the drain on the battery.


Using the Smartphone App

Read this section for information on the options available for downloading pictures to your smartphone using the smartphone app.

 Before proceeding, select **ON** for **Bluetooth/SMARTPHONE SETTING > Bluetooth ON/OFF**.


Selecting and Downloading Pictures Using the Smartphone App

You can download selected pictures to a smartphone using the smartphone app.

 More information is available from the following website:

<https://app.fujifilm-dsc.com/>

Uploading Pictures as They Are Taken

Pictures taken with **ON** selected for  **CONNECTION SETTING > Bluetooth/SMARTPHONE SETTING > AUTO IMAGE TRANSFER ORDER** will automatically be marked for upload to the paired device.

-  • If **ON** is selected for both **Bluetooth/SMARTPHONE SETTING > Bluetooth ON/OFF** and **IMAGE TRANSFER WHILE POWER OFF** in the  **CONNECTION SETTING** menu, upload to the paired device will continue even while the camera is off.
- Selecting **ON** for  **CONNECTION SETTING > Bluetooth/SMARTPHONE SETTING > RESIZE IMAGE FOR SMARTPHONE**  enables compression, reducing file size for upload.

Selecting Pictures for Upload in the Playback Menu

Use **IMAGE TRANSFER ORDER > SELECT FRAMES** to select pictures for upload to a paired smartphone or tablet via Bluetooth®.

Copying Pictures to a Computer: PC AutoSave

Install the latest version of FUJIFILM PC AutoSave to your computer to upload pictures from the camera over wireless networks (Wi-Fi).

FUJIFILM PC AutoSave

For downloads and other information, visit:

http://app.fujifilm-dsc.com/en/pc_autosave/

Computers: Wireless Connections

You can upload pictures from the camera using the **PC AUTO SAVE** option in the playback menu.



Accessories from Fujifilm

The following optional accessories are available from Fujifilm. For the latest information on the accessories available in your region, check with your local Fujifilm representative or visit http://www.fujifilm.com/products/digital_cameras/index.html.

Rechargeable Li-ion batteries

NP-W126/NP-W126S: Additional high-capacity NP-W126/NP-W126S rechargeable batteries can be purchased as required.

Battery chargers

BC-W126/BC-W126S: Replacement battery chargers can be purchased as required. At +20°C/+68°F, the BC-W126/BC-W126S charges an NP-W126/NP-W126S in about 150 minutes.

DC couplers

CP-W126: For extended shooting or playback or when using the camera with a computer, use the CP-W126 to connect the camera to the AC-9V power adapter.

AC power adapters

AC-9V (requires CP-W126 DC coupler): Use this 100–240 V, 50/60 Hz AC power adapter for extended shooting and playback or when copying pictures to a computer.

Remote releases

RR-100: Use to reduce camera shake or keep the shutter open during a time exposure (ø2.5 mm).

Stereo microphones

MIC-ST1: An external microphone for movie recording.

FUJINON lenses

XF-/XC-series lenses: Interchangeable lenses for use exclusively with the FUJIFILM X-mount.

FUJINON MKX-series lenses: Cinema lenses for the FUJIFILM X-mount.

Macro extension tubes

MCEX-11/16: Attach between the camera and the lens to shoot at high reproduction ratios.

Teleconverters

XF1.4X TC WR: Increases the focal length of the compatible lenses by about 1.4x.

XF2X TC WR: Increases the focal length of the compatible lenses by about 2.0x.

Mount adapters

FUJIFILM M MOUNT ADAPTER: Allows the camera to be used with a wide selection of M-mount lenses.

Body caps

BCP-001: Cover the camera lens mount when no lens is attached.

Shoe-mounted flash units

EF-X500: In addition to manual and TTL flash control, this clip-on flash unit has a Guide Number of 50/164 (ISO 100, m/ft.) and supports FP (high-speed sync), allowing it to be used at shutter speeds that exceed the flash sync speed. Featuring support for the optional EF-BP1 battery pack and Fujifilm optical wireless flash control, it can be used as a master or remote flash unit for remote wireless flash photography.

EF-BP1: A battery pack for shoe-mounted flash units. Takes up to 8 AA batteries.

EF-42: This clip-on flash unit has a Guide Number of 42/137 (ISO 100, m/ft.) and supports manual and TTL flash control.

EF-X20: This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.) and supports manual and TTL flash control.

EF-20: This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.) and supports TTL flash control (manual flash control is not supported).

Tripod grips

TG-BT1: Record movies, take photographs, or adjust zoom on compatible power zoom lenses while holding this Bluetooth tripod grip.

Hand grips

MHG-XT10: Features an improved grip. Batteries and memory cards can be removed with the grip in place, and the grip is equipped with a rail for quick-shoe camera mounts.

Leather cases

BLC-XT10: This case combines practicality with the luxury of leather and comes with a shoulder strap made of the same material, as well as a cloth that can be used to wrap the camera before putting it in the case and on other occasions. Pictures can be taken and batteries inserted or removed with the camera still in its case.

Grip belts

GB-001: Improves grip. Combine with a hand grip for more secure handling.

instax SHARE printers

SP-1/SP-2/SP-3: Connect via wireless LAN to print pictures on instax film.

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

<https://fujifilm-x.com>

