

有关照相机设定限制的信息

下表列出了每种拍摄模式下的可用选项。某些选项可能不适用于在特定模式下支持的项目，且根据拍摄环境的不同，功能可能会被限制。

自动模式选择器拨杆		●				● AUTO		● AUTO		● AUTO		AUTO														TEXT	13				
拍摄模式/场景定位		P	S	A	M	□	□	□	□	□	□	SR+	♂	♀	⌚	▲	❖	🌙	✳	✳	✳	✳	✳	✳	✳	✳	✳				
连拍	●/●	✓	✓	✓	✓							✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓			
包围	□/ISO/WB/DR	✓	✓	✓	✓																										
数码远摄增距镜		✓	✓	✓	✓							✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓			
触摸屏模式		✓	✓	✓	✓							✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓			
闪光灯模式 ¹⁰	AUTO	✓										✓	✓	✓	✓	✓	✓	✓	✓										✓		
	⌚	✓	✓	✓	✓							✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		
	SLOW	✓										✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		
	IS_C	✓	✓	✓	✓							✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		
	IE	✓	✓	✓	✓							✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		
	⌚	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		
	AUTO	✓										✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		
	⌚	✓	✓	✓	✓							✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		
	⌚	✓										✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		
	⌚	✓										✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		
闪光补偿		✓	✓	✓	✓							✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓ ¹²		
自拍		✓	✓	✓	✓							✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		
曝光补偿		✓	✓	✓	✓ ⁵	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓ ²	✓		
F		✓ ¹	✓ ¹	✓	✓	✓	✓	✓ ¹	✓	✓	✓																				
S.S.		✓ ¹	✓ ⁴	✓ ¹	✓ ⁴	✓ ³	✓ ¹	✓	✓ ³	✓																					
快门类型	MS	✓	✓	✓	✓	✓	✓	✓ ¹	✓ ¹	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓ ¹²			
	MS+ES	✓	✓	✓	✓	✓	✓					✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓ ¹²		
	ES	✓	✓	✓	✓	✓	✓					✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓ ¹	✓ ¹²	
程序切换		✓										✓	✓															✓ ¹²			
AE/AE/AF-LOCK按钮	AF-L	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓ ¹²		
	AE+AF	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓ ¹²		
ISO	自动											✓	✓ ¹	✓																	
	自动1/自动2/自动3	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓																		✓ ¹²		
	H (51200) ²	✓	✓	✓	✓	✓						✓																			
	H (25600) ²	✓	✓	✓	✓	✓																									
	H (12800) ²	✓	✓	✓	✓	✓																									
	6400–1000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓																				
	800–400	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓																				
胶片模拟	320–200	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓																				
	L (100)	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓																				
	L	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓																			✓ ¹²	
	M	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓																		✓ ¹²		
	S	✓	✓	✓	✓	✓	✓	✓	✓ ¹	✓ ¹	✓																✓ ¹²				
图像质量	FINE/NORMAL	✓	✓	✓</td																											

自动模式选择器拨杆		●				● AUTO		● AUTO		● AUTO		AUTO												13			
拍摄模式/场景定位		P	S	A	M	LCD		取景器		Adv.		SR ⁺	肖像	运动	山	人像	星	月亮	烟火	闪光灯	自拍	水下	鱼	鸡尾酒	花	TEXT	
显示自定义设置	取景框	✓	✓	✓	✓			✓	✓	✓	✓	✓	✓ ⁷														
	电子水平仪	✓	✓	✓	✓			✓	✓	✓	✓		✓ ⁷														
	自动对焦距离指示	✓	✓	✓	✓			✓	✓	✓	✓		✓ ⁷														
	手动对焦距离指示	✓	✓	✓	✓			✓	✓				✓ ⁷														
	直方图	✓	✓	✓	✓			✓	✓				✓ ⁷														
	光圈/快门速度/ISO	✓	✓	✓	✓	✓		✓		✓											✓ ⁸						
	曝光补偿	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓ ⁷														
	测光	✓	✓	✓	✓			✓	✓																		
	闪光灯	✓	✓	✓	✓			✓	✓	✓	✓	✓	✓ ⁷														
	白平衡	✓	✓	✓	✓	✓		✓																		✓	
	胶片模拟	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓														✓	
	动态范围	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓														✓	
	剩余张数	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓ ⁷														
	图像大小/质量	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓ ⁷														
	电池电量	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓ ⁷	✓													
色彩空间		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓ ⁹	✓ ¹²

1 自动固定。

2 动画录制期间限制在 ±2.0EV 范围内。

3 可用选项根据拍摄模式的不同而异。

3 可用选项根据拍摄模式的不同而异。
4 不可用。

4 A 不可用。
5 仅适用于自

仅适用于自动 ISO 感光度。

6 仅当在对焦模式下将自动对焦模式选为单点时可用
7 仅当自动模式选择器拨杆旋转至 AUTO 时可用

7 仅当自动模式选择器拨杆旋转至 **AUTO** 时可用。
8 屏幕仅显示快门速度。

8 屏幕仅显示快门速度。
9 自动选择 DSCB

9 自动选择 sRGB。

10 快门类型 选为

11 间隔定时拍摄开